

My Diva frame has become noisy



* * * * *

And in the same location
on the opposite side.

* * * * *



The bolt and Nyloc nuts used on our electric couches are a safety feature. With the continual moving of the Affinity Diva frame, the bolts/nuts have a tendency to tighten themselves, resulting in noisy operation. In the event of your couch developing an unwelcome noise we suggest a spray of WD40 (or other lubricating/silicon spray) and slightly loosening of the nuts at the above asterisked (*) locations.

If this does not rectify the situation then a simple nut/bolt change will.