

Clearing Receiver/Programming Remote Control Procedure:

REMOTE CONTROL LED LIGHT

LEARN BUTTON

**SWIM CURRENT/TREADMILL
REMOTE CONTROL****Clearing Receiver:**

1. Press and hold the LEARN button, located at the top of the receiver board, until the remote control LED light is a solid and steady red light.
2. Continue to hold the LEARN button until the remote control LED light goes out.
3. Once the remote control LED light goes out, the receivers memory has been cleared from any previously linked remote controls.

Programming Remote Control:

1. Press and hold the LEARN button, located at the top of the receiver board, until the remote control LED light is a solid and steady red light.
2. Once the remote control LED light turns on, release the LEARN button.
3. While the remote control LED light remains on, press and hold any button on the remote control. The remote control is successfully programmed when the LED light turns off momentarily and then flashes in response to any button held on the remote control.
4. Repeat the programming procedure for any subsequent remote control.