

## EP3 Receiver Board

Internal Remote Control  
Learn Button

Remote Control LED Light



External Remote Control Learn Button  
(underside of power unit controller)



### Programming Remote Control:

1. Press and hold the internal or external remote control learn button until the remote control LED light on the receiver board turns on.
2. Once the LED light turns on, release the remote control learn button.
3. While the LED light is on, press and hold any button on the remote control. The LED light will blink twice and then turn off. The remote control is now programmed and linked to the receiver board. Repeat the programming procedure for any subsequent remote.



Wireless Remote Control

**Clearing Receiver:**

1. Press and hold the internal or external remote control learn button until the remote control LED light on the receiver board starts blinking rapidly.
2. Continue to hold the remote control learn button until the LED light goes out.
3. Once the LED light goes out, the receiver's memory has been cleared from any previously linked remote controls.