

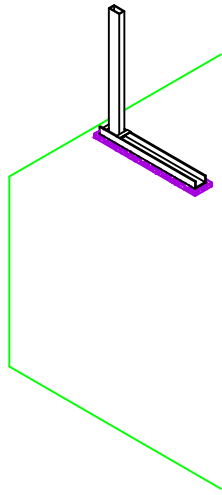



BASE LAYOUT DETAILS FOR BAYSWATER WOODEN POOL
 ISSUE 2 - SW 9/3/17
 PLEASE REFER TO MAIN INSTRUCTIONS FOR STRUCTURE ASSEMBLY

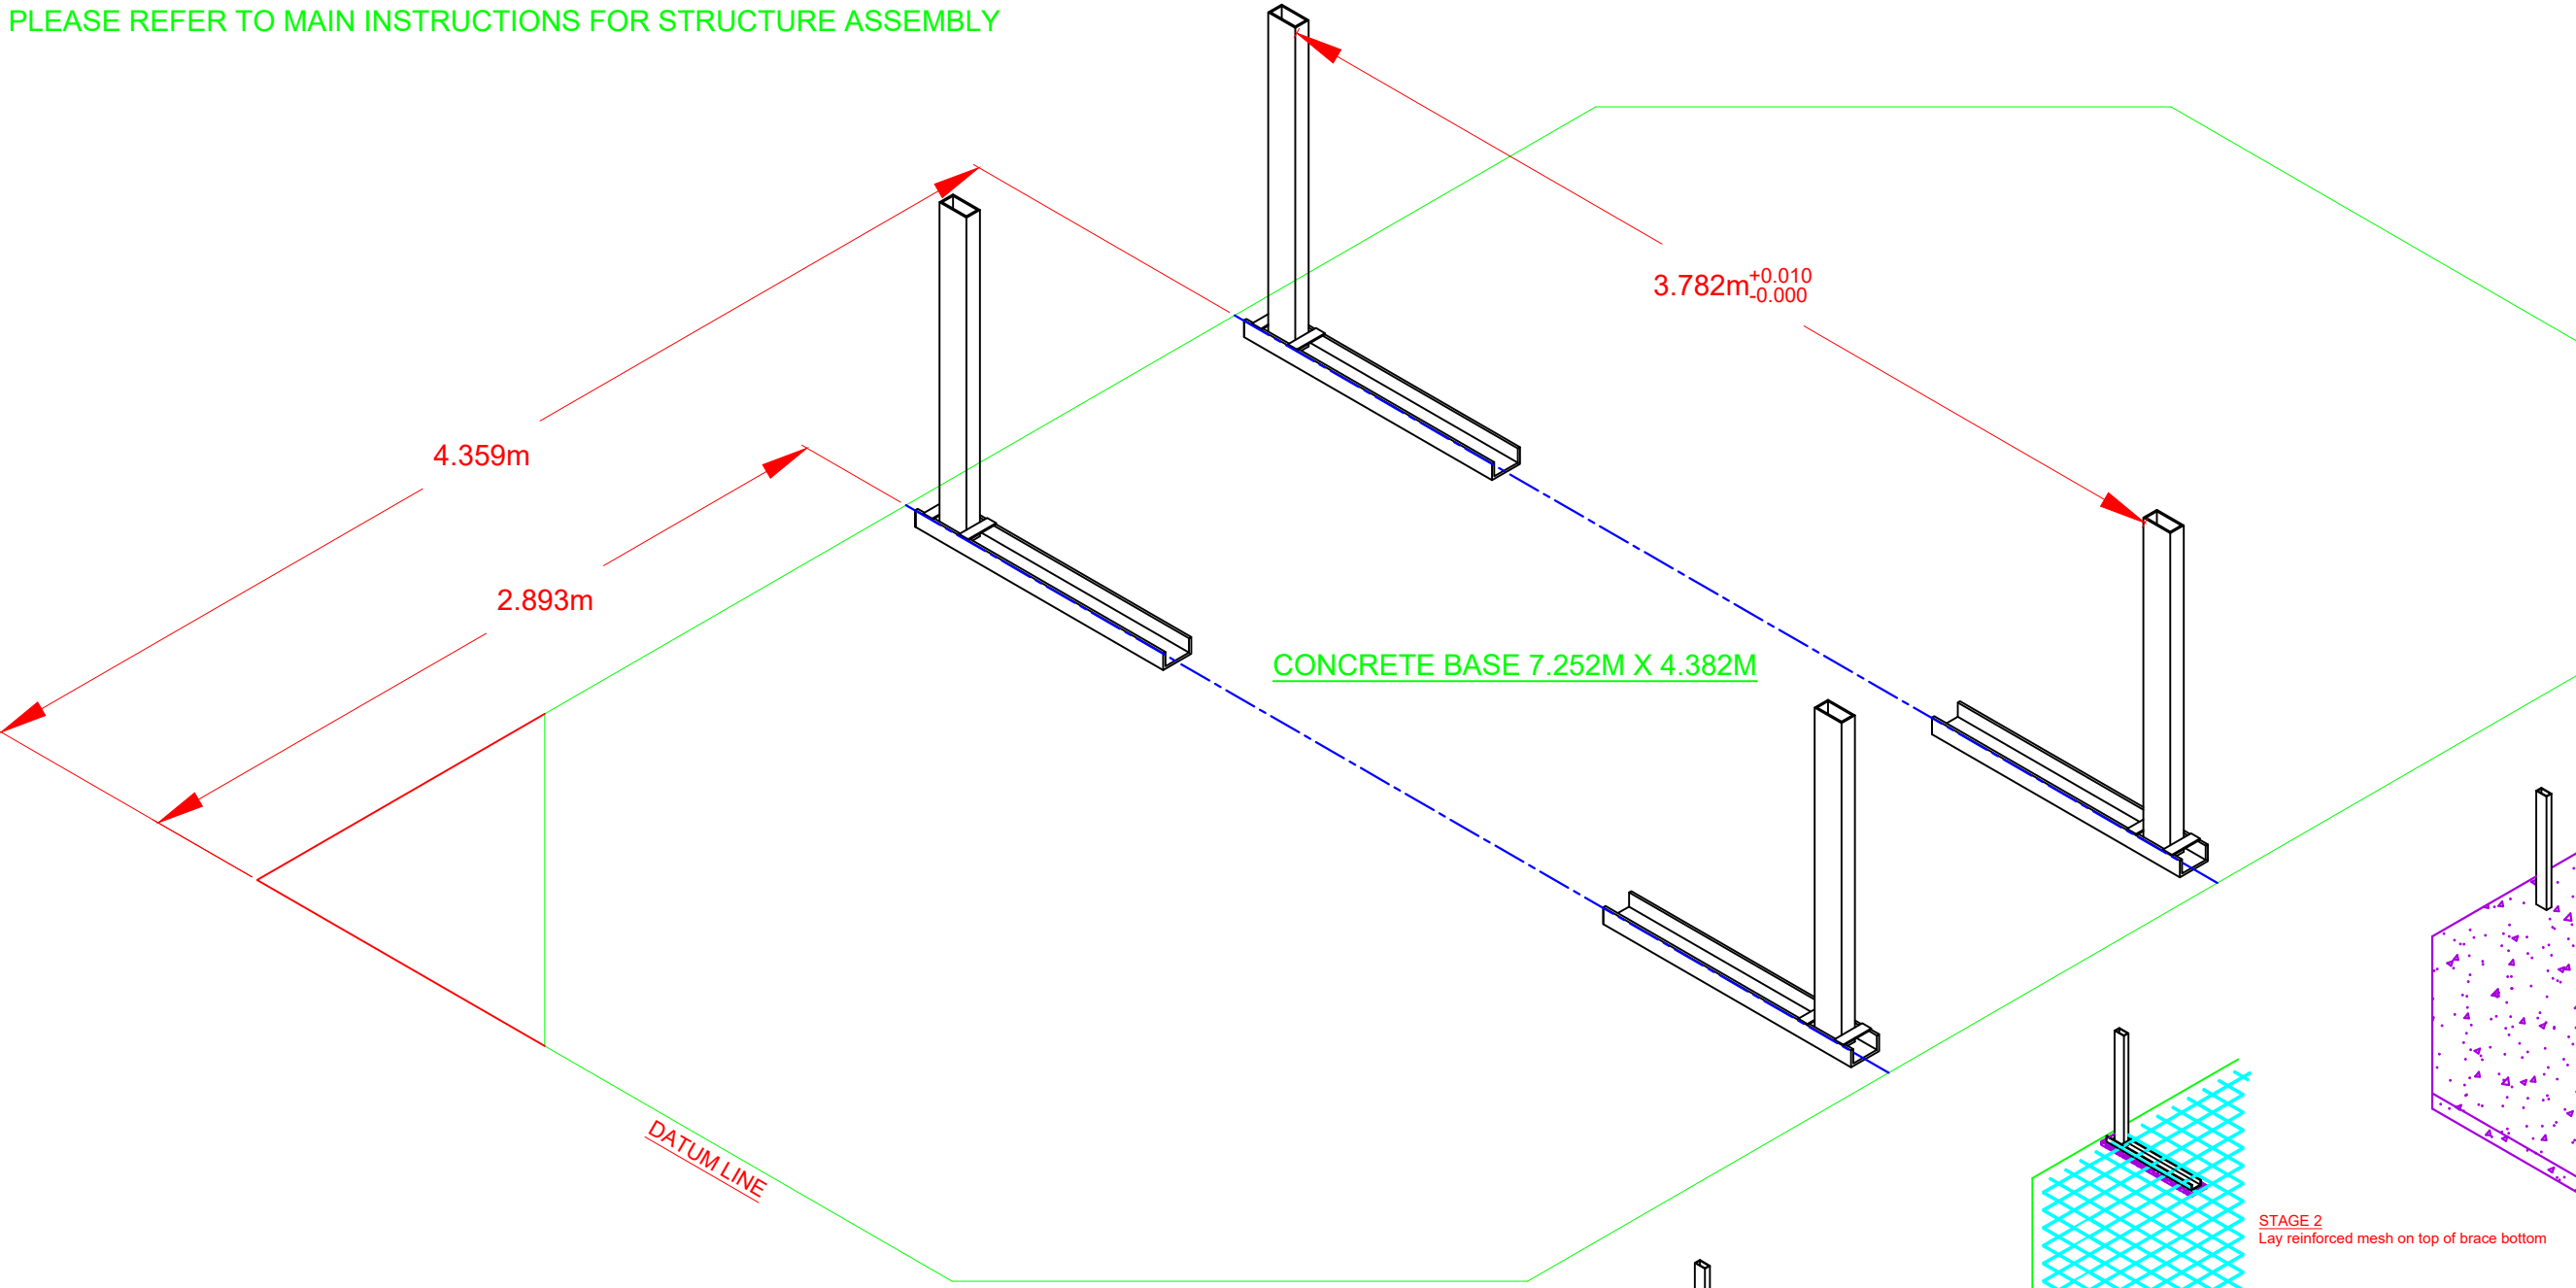

STAGE 1
 When happy with brace location(s)
 Set braces on approx 35mm bed of mortar and concrete around brace(s) before the main pour of cement.

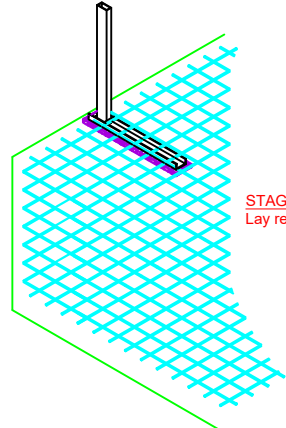

STAGE 2
 Lay reinforced mesh on top of brace bottom

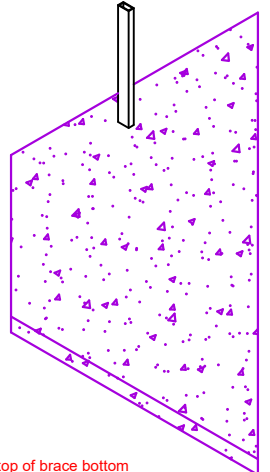

STAGE 3
 When mesh is in position pour concrete into excavation to cover mesh by 50mm minimum.

